

Marijuana (THC) Rapid Test

The kit is used to detect THC in human urine with a cut-off concentration of **10ng/mL**.

FEATURES



Easy and rapid



CE approved



Highly sensitive and accurate



For professional use




HOW TO TEST

1




A clean and dry container.
The specimen should be clear.

2

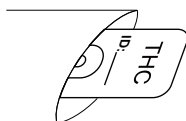


Remove the test cassette
from the sealed pouch.

3

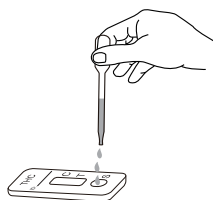

3 full drops


4

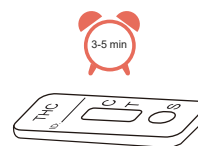

Read the test results
at 3-5 minutes.

HOW TO READ


Negative

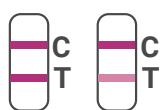

Positive



Invalid

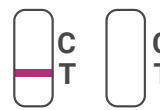

Hangzhou Clongene Biotech Co., Ltd.

Tel: +86-571-88617879

E-mail: marketing@clongene.com

Web: en.clongene.com

Add: No.1 Yichuang Road, Yuhang Sub-district, 311121 Hangzhou, China

